

INSTALLATION INSTRUCTIONS



ELECTRICAL SHOCK HAZARD

READ, UNDERSTAND, and FOLLOW these instructions before installing the equipment.

WARNING

Disconnect the Electrical supply power at the service panel (fuse or circuit breaker box). Failure to do so could result in serious injury or death. Only qualified electricians should install this fixture and the installation **MUST** conform to the Canadian Electrical Code Part I and all local codes and ordinances. Ensure that only proper tools, materials, and equipment are used to complete the installation.


SAFETY

- Proper grounding is required to ensure personal safety.
- Fixture should be mounted in locations where unauthorized personnel will not readily subject it to tampering.
- Do not use this equipment for anything other than its intended purpose.
- Servicing this equipment should be performed by qualified service personnel.
- Save these instructions.
- **MIN 90 °C SUPPLY CONDUCTOR**

INSTALLATION

POLE & ARM MOUNT


1. Loosen set screws from the fixture slip fit mount.
2. Make appropriate wiring connections as per wiring diagram.
3. Carefully place the fixture on a 3" (76.2mm) OD pole or decorative arm.
NOTE: Fixture can ONLY fit on 3" diameter poles or adapters.
4. For Mounting on the decorative arm, secure the arm to the wall and place the fixture onto the arm.
5. CAUTION: Pay attention not to pinch any wiring. Tighten set screws to secure fixture.

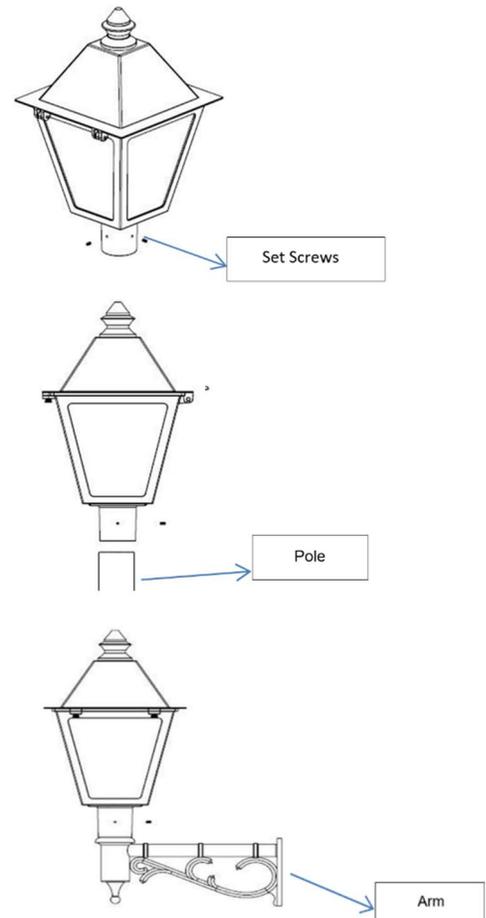

INSTALLATION INSTRUCTIONS

ACCESSING BRANCH CONNECTIONS

1. Unscrew the thumb screw to open the top of the fixture.
2. Remove the four corner screws ONLY, as shown in the figure, to remove the heat sink.
3. The heat sink can be lifted to get access to the bottom half of the fixture.
4. Remove the reflector mount plate by removing the four corner screws as shown in figure to access branch connections.

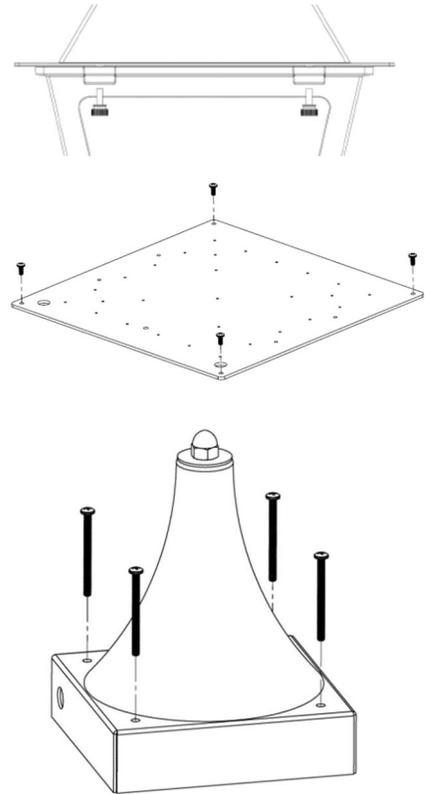


LUMEN SELECTABLE SWITCHES

- Lumen selectable switch is included in every luminaire. It is accessed inside during installation. Lumens vary depending on model.
Max lumen setting is default.

CCM-LED81A41 (ADJ 80W/60W/40W)			
WATTS	40	60	73
LUMENS	4462	6693	8091
CCM-LED110A81 (ADJ 110W/90W/80W)			
WATTS	80	90	99.7
LUMENS	8419	9472	10495
CCM-LED110A41 (ADJ 110W/80W/40W)			
WATTS	40	80	99.7
LUMENS	4462	8419	10495

WIRING

- Check that the line voltage is correct.
- Connect fixture **GROUND** (green) wire to power supply **GROUND** (green) wire.
- Connect fixture **WHITE** wire to power supply **NEUTRAL** wire.
- Connect fixture **BLACK** wire to power supply **LINE** wire.
- The fixture includes 0-10V dimming functionality, connect **GREY** and **VIOLET** wires to a 0-10V dimming controller.

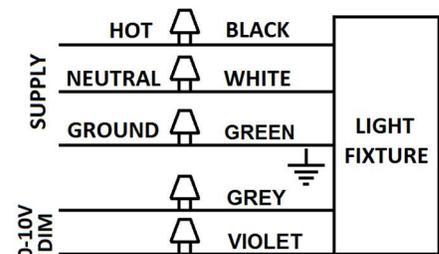

INSTRUCTIONS D'INSTALLATION



RISQUE D'ÉLECTROCUTION

LIRE, COMPRENDRE, et SUIVRE ces instructions avant d'installer l'équipement.

AVERTISSEMENT

Débranchez l'alimentation électrique au panneau de service (de fusible ou de disjoncteur). Ne pas le faire pourrait entraîner des blessures graves ou la mort. Seul un électricien qualifié doit installer cet appareil et l'installation doit conformer au code électrique canadien Partie I et tous les codes et règlements locaux. S'assurer que seuls les outils, les matériaux et l'équipement approprié soient utilisés pour faire l'installation.




SÉCURITÉ

- Pour votre sécurité, il est nécessaire d'effectuer une mise à la terre appropriée.
- Le luminaire doit être installé dans des endroits où du personnel non autorisé ne peut pas le modifier facilement.
- N'utilisez pas cet équipement à d'autres fins que celles pour lesquelles il a été conçu.
- L'entretien de cet équipement doit être effectué par un technicien qualifié.
- Conservez ces instructions pour référence future.
- **FILS D'ALIMENTATION 90°C MIN**

INSTALLATION

MONTAGE SUR POTEAU ET BRAS



1. Desserrez les vis de réglage du montage à raccord lisse.
2. Branchez correctement les fils. Voir directives de câblage.
3. Placez soigneusement le luminaire sur un poteau ou un bras décoratif de 3" (76,2 mm) de diamètre extérieur.
REMARQUE : le luminaire peut UNIQUEMENT s'adapter sur des poteaux ou des adaptateurs de 3" de diamètre
4. Pour le montage sur le bras décoratif, fixez le bras au mur et placez le luminaire sur le bras.
5. ATTENTION: Tenir compte de ne pas pincer les fils. Serrez les vis de réglage pour fixer le luminaire au poteau.

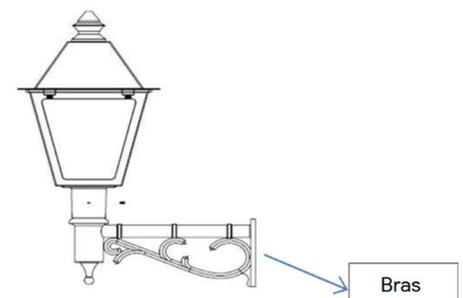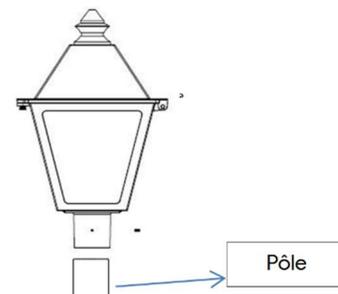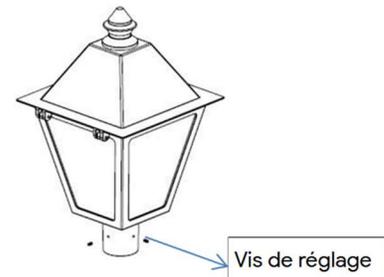

INSTRUCTIONS D'INSTALLATION

ACCÈS AUX LIGNES DE TENSIONS

1. Dévissez la vis pour ouvrir le haut du luminaire.
2. Retirez SEULEMENT les quatre vis d'angle, comme indiqué sur la figure, pour retirer le dissipateur thermique.
3. La plaque DEL peut être soulevé pour accéder l'intérieur.
4. Retirez le réflecteur en retirant les quatre vis d'angle comme indiqué sur la figure pour accéder les câbles.

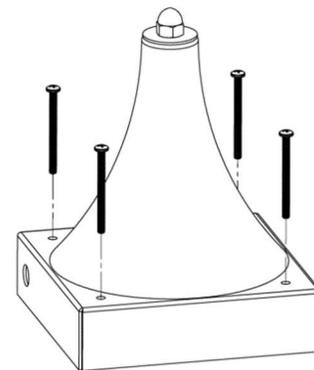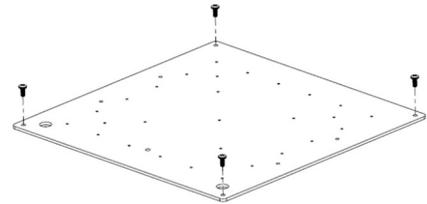

INTERRUPTEURS SÉLECTIONNABLES DE LUMEN

- Un commutateur sélectionnable Lumen est aussi inclus dans chaque luminaire. Il est accessible à l'intérieur pendant l'installation. Les lumens varient selon le modèle.
Le réglage max lumen est par défaut.

CCM-LED81A41 (ADJ 80W/60W/40W)			
WATTS	40	60	73
LUMENS	4462	6693	8091
CCM-LED110A81 (ADJ 110W/90W/80W)			
WATTS	80	90	99.7
LUMENS	8419	9472	10495
CCM-LED110A41 (ADJ 110W/80W/40W)			
WATTS	40	80	99.7
LUMENS	4462	8419	10495

DIRECTIVES DE CÂBLAGE

- Assurez-vous que la tension de ligne est appropriée.
- Branchez le fil **VERT** du luminaire au fil de **TERRE** de l'alimentation.
- Branchez le fil **BLANC** du luminaire au fil **NEUTRE** de l'alimentation.
- Branchez le fil **NOIR** du luminaire au fil de **LIGNE** de l'alimentation.
- Le luminaire inclut une fonction d'intensité réglable de 0-10V, branchez les fils **GRIS** et **VIOLET** à un contrôleur de 0-10V.

