


PEDESTAL – INSTALLATION STEPS

- Remove the top cover and base of the pedestal.
(Not fastened to pedestal for quick disassembly)



PEDESTAL – INSTALLATION STEPS

- Remove the required rubber plugs and attach screws and washers (hardware by others) for mounting the charger.

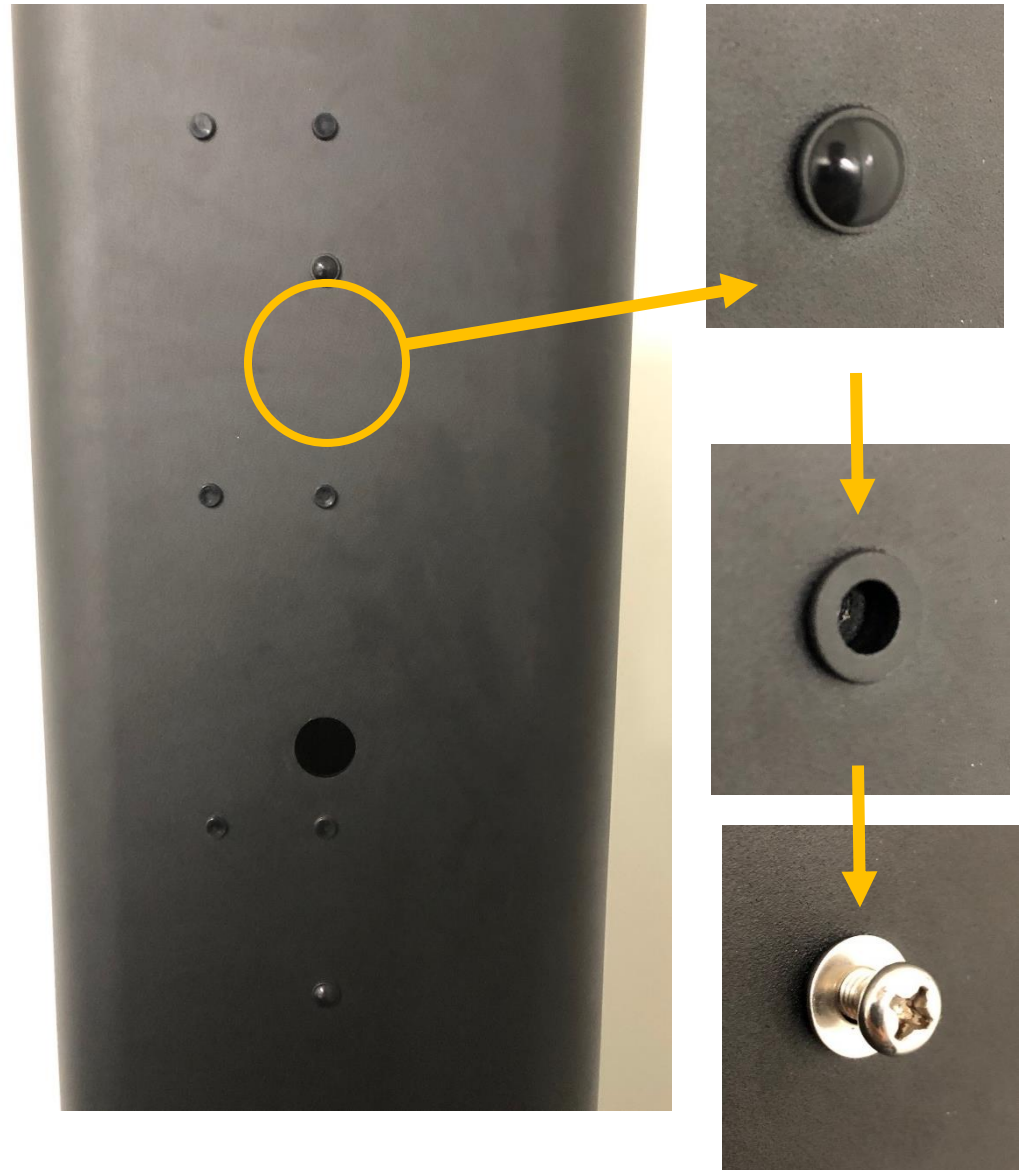

PEDESTAL – INSTALLATION STEPS

- Attach an appropriate strain relief and secure it from inside the pedestal (Tool access through top).



PEDESTAL – INSTALLATION STEPS

- Hook the charger to the pedestal using the top mounting screw and secure it in place using the bottom screw.



PEDESTAL – INSTALLATION STEPS

- Use a cable of atleast 5' length and connect one end of the cable to the charger terminals and feed the other end through the strain relief into the pedestal.



PEDESTAL – INSTALLATION STEPS

- Attach the pedestal mounting plate on the ground with provided anchor bolts.
- Pull the power line through the bottom of the pedestal and connect it to the cables coming from the ground.



PEDESTAL – INSTALLATION STEPS

- Slide the Pedestal over the base and fasten using 4 screws provided.
- Attach the top cover using the 8 screws provided



PEDESTAL – INSTALLATION STEPS

- Attach the charger cover using the Charger hardware.

